

## NUVIEW Installation Instructions

### Navitar/Nuview Series 669 lens on Christie model LX37, LX40, LX45 & LX50 projectors.

**TOOLS REQUIRED:** PHILLIPS HEAD SCREWDRIVER

#### Disassembly:

1. Disconnect unit from power source and place projector with lens facing you. Remove two (2) screws from top cover of lens. Remove cover and set aside for reinstallation.
2. Remove prime lens by lifting the lever on the left side of the prime lens and sliding the lens away from the projector.

#### Assembly:

1. Separate your Navitar lens and adapter (except on MCZ275) by gently rotating the lens counterclockwise while holding the adapter. **DO NOT** place undo pressure on the lens to separate as this may result in damage to the nylon drive pin. Position the adapter with the 'up' label in the correct position and slide the adapter into the projector ensuring proper engagement. Rotate the lever counterclockwise until the adapter is securely in place.
2. Replace the front cover of the projector removed in step 2, above.
3. Reinstall the lens by gently rotating clockwise as it is inserted into the adapter.
4. To focus, gently twist the front of lens. To zoom, loosen thumbscrew and twist knurled ring (zoom lenses only, of course). Re-tighten thumbscrew. **CAUTION:** Do not twist entire lens out of adapter!

Navitar, Inc.  
200 Commerce Drive  
Rochester, New York  
14623

Phone  
585.359.4000  
800.828.6778

Fax  
585.359.4999

[navitar.com](http://navitar.com)  
[info@navitar.com](mailto:info@navitar.com)