

NuVIEW Installation Instructions

Installation of Navitar NuView Series 356 lens on Sony model VPL-PX21, PX30, PX31, PX32, FX50, FX51 & FX52 projectors.

TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER

Disassembly:

1. Disconnect unit from power source.
2. To remove the top plate, slide a flat head screw driver or any hard, flat object in the slot at the back of the plate, push down gently, then slide the plate forward. Set the plate aside.
3. The lens should now be exposed. Looking down from above locate and remove the four screws (two on either side of the lens) that hold the prime lens in place. Lens should now slide forward out of the projector freely. Set the prime lens aside.
4. If you are installing a 356MCZ500, proceed directly to step #6. For all other lenses continue with step #5.
5. You must remove the top cover of the projector. To do this, locate and remove two screws on the left side of the projector and two screws on the right side. Next, locate and remove two small upward facing screws that were underneath the top plate, one on each side of the opening, towards the front. The entire top cover should now lift off, though it will still be attached by wires. Set it out of your way.
6. Looking down from above locate and remove two small screws just inside the front corners, left and right, securing the front cover to the main projector body. Lift the front of the projector up slightly to take the weight off the front feet and slide the front cover off. Looking at the inside of the front cover you will see two small screws holding a crescent shaped plate just beneath the lens opening. Remove these two screws and the crescent plate. Set them aside with the prime lens (you will not be reinstalling them until you reinstall the prime lens). Re-secure the front cover with the two screws on the inside of each corner, then replace the entire top cover, using the same screws as before in reverse order.

Assembly:

1. Re-secure the front cover with the two screws on the inside of each corner, then replace the entire top cover, using the same screws as before in reverse order.
2. Gently place the Navitar lens into the cradle. Using the same four screws that held the prime lens in place secure the Buhl lens. Replace the top plate that covers the lens by setting it in place and sliding it backwards.
3. To focus, gently twist the front of the lens. To zoom, loosen thumbscrew and twist the knurled zoom ring. Re-tighten thumbscrew. CAUTION: When focusing, be sure not to twist lens completely out of the adapter!

Navitar, Inc.
200 Commerce Drive
Rochester, New York
14623

Phone
585.359.4000
800.828.6778

Fax
585.359.4999

navitar.com
info@navitar.com